

CSE-Q CSE-QG

TRANSLATION OF ORIGINAL INSTRUCTIONS
CAREFULLY READ THIS MANUAL BEFORE USING OR REPAIRING THIS PRODUCT

CDR Single Mechanical Seal with Quench PLAN 62

Installation, Operating and Maintenance Manual



Pumps UK Ltd | Making the right choice

1. Introduction 6
 - 1.1 Product description 6
 - 1.2 Limit temperature for elastomers 6
2. Safety 7
 - 2.1 Expected use 7
 - 2.2 Improper use 7
 - 2.3 Operation in an explosive environment 7
3. First supply/Start-up 8
 - 3.1 Connecting piping 8
 - 3.2 Running the pump 9
4. Operation and maintenance 10
 - 4.1 Seal disassembly 10
 - 4.1.1 CSE-Q seal disassembly 10
 - 4.1.2 CSE-QG seal disassembly 11
 - 4.2 Seal assembly 11
 - 4.2.1 Checks on pump 11
 - 4.2.2 Checks on pump shaft 11
 - 4.2.3 Checks on seal 12
 - 4.2.4 Precautions during installation 13
 - 4.2.5 Seal installation 13
5. Machine stop or storage 14

This manual provides the users of the mechanical seal unit of C.D.R. Pompe S.r.l. with the information required for correct installation, operation and maintenance under safety conditions as established by EC standards.

Please read this manual carefully before installation and make it available at any time to anyone using the machine.

The user is liable for damage resulting from not observing the operation conditions agreed at Order confirmation.

The Purchaser has the responsibility to:

- Check that the mechanical seal unit and any accessory are suitable for the working environment.
- Provide suitable personal protective equipment to the operators.
- Inform users of the allowed use.

C.D.R. Pompe S.r.l. may update or edit this manual at any time and without previous notice to correct typos, inaccurate information or updated products.

These changes must be added to new editions of the manual.

C.D.R. Pompe S.r.l. has no obligation to install any modification of design or improvement of the products to previously delivered units.

This manual contains technical information and drawing owned by C.D.R. Pompe S.r.l. and cannot be reproduced in full or in part in any case without prior written authorization by C.D.R. Pompe S.r.l.

Any use other than the operation described in the manual is considered improper use and therefore C.D.R. Pompe S.r.l. will not be held responsible in this case.

C.D.R. Pompe S.r.l. is a leader in designing, manufacturing, selling and servicing centrifugal pumps for the treatment of dangerous and corrosive liquids in the chemical and pharmaceutical industries and in other industrial processes.

C.D.R. Pompe S.r.l.

Via P. Togliatti 26/A

20030 Senago (MI)

Italy

Tel. +39 02 990 1941

Fax +39 02 998 0606

www.cdrpompe.com

1. Introduction

This manual provides the user of CCL series pumps all necessary information to install, operate and maintain the mechanical seals; therefore the operator must read the manual thoroughly so that the product is used correctly, as well as the the manual of the pump on which the mechanical seal is installed.

1.1 Product description

The CSE-Q series seals are balanced and stationary single internal type, flushed from a non pressurised external source (type Q) and are installed in a conical stuffing box housing.

The materials used for wet parts can be plastic (e.g. fluoropolymer) or sintered (e.g. silicon carbide).

SPECIFICATIONS	DESCRIPTION
Type of seal	Internal single seal with quench
Wet part materials	Carbon / SiSiC FPM / EPDM
Temperature range	See CCL / CCL-B series pump manual
Operating pressure limits	See CCL / CCL-B series pump manual

1.2 Limit temperature for elastomers

The following table shows the lower and upper operating temperature (in degree Celsius [°C]) for conventional O-rings (elastomers and non-elastomers):

ELASTOMER		RANGE T [°C]	Notes
Ethylene-Propylene Diene Monomer (EPDM)	E62	- 40 ÷ + 140	non-resistant to greases and mineral oils
Fluorocarbon (FPM)	E63	- 20 ÷ + 180	water heated to max 120°C
Perfluoroelastomer (FFKM)	E93	- 20 ÷ + 270	att. swelling with fluoroelastomer solvents
Fluorocarbon enc FEP (FKM enc FEP)	E66	- 20 ÷ + 180	rigid gasket
Silicon enc FEP (VMQ enc PFA)	E65	- 50 ÷ + 200	
Teflon (PTFE)	F44	- 200 ÷ + 260	

WARNING! The temperature range of elastomers shown in the table must always be related to the nature of the pumped liquid.

2. Safety

Use of this manual is subject and connected to the CCL series pump manual.

All provisions for safe installation, operation and maintenance are in chapter 4 of the CCL series pump manual.

Non compliance with safety instructions may cause danger for persons, the environment and the machine, voiding any claim against C.D.R. Pompe S.r.l.

2.1 Expected use

Mechanical seals for UCL series pumps can usually be used for corrosive, toxic or flammable liquids.

The mechanical seal must be completely wet under any operating condition. Do not run the mechanical seal dry at any time, not even for short intervals.

The instructions in the installation, operation and maintenance manual or in the data sheet and/or contractual documentation must be strictly followed; if in doubt please contact C.D.R. Pompe S.r.l.

Please read the following instructions thoroughly. Installation in compliance with the following instructions facilitate long-lasting and efficient operation of the mechanical seal. For all seal auxiliary systems (buffers, exchangers, etc.) see the specific instructions provided separately.

2.2 Improper use



Improper use, even for short periods, may seriously damage the unit (pump and mechanical seal) and in highly-explosive environment it may cause an additional potential ignition source (due to overheating, static currents, sparks, lack of lubrication, etc.): please always follow the pump and seal manual instructions closely.

2.3 Operation in an explosive environment

The CSE-Q mechanical seal is a standard seal, therefore it must be considered a machine element. The machine elements are excluded from the provisions of Directive 2014/34/UE (ATEX 95 product directive) since they are considered integral parts of a larger machinery (pump, agitator). This exception was confirmed both by the ATEX permanent committee of the EC and by the European Sealing Association (ESA).

See the following web pages:

EC ATEX permanent committee: <http://ec.europa.eu/enterprise/atex/rotating.htm>

ESA opinion: <http://www.europeansealing.com/statements.html>

The manual of the pump in which the seal is installed and this manual are complementary.

See the ATEX section in the pump manual for the allowed temperature limits.



Take particular care when the unit is installed in potentially explosive areas. Avoid any incorrect or improper operation!

3. First supply/Start-up

3.1 Connecting piping

Please refer to the assembly drawing of the seal to identify the connections.

Always check that piping is connected to the correct fittings of the seal, to avoid dangerous situations.

For the support systems, buffer and accessories, read the relevant installation, operation and maintenance manual thoroughly.

It is a good practice to limit the quantity of bends and fittings used for the connection; furthermore, try to minimise any kinking, particularly for closed circuit installations (type Plan 53A).

Always ensure that the circuit is free from vapour or air bubbles.

The inlet connection in the seal flange must always be placed at the same level or above the outlet connection.

CSE-Q - Single mechanical seal with non-pressurised quench (PLAN 62)

This system must be always activated before running the pump for seals with non-pressurised quenching system (PLAN 62). Then ensure that the pump is filled and primed with process liquid.

The inlet flushing fluid pressure must be max. 1 bar, a minimum value of 0.5 bar is recommended. In any case the flushing pressure must not exceed the pressure in the stuffing box housing.

Usually, when water is used to quench, the flow rate must be set to approximately 50 l/h for the first 12 hours of operation. The flow rate can then be lowered so that the temperature of the quenching fluid at the outlet is approximately 20°C. The minimum quenching flow rate should never be lower than 10 l/h.

For better understanding, see the following diagram.

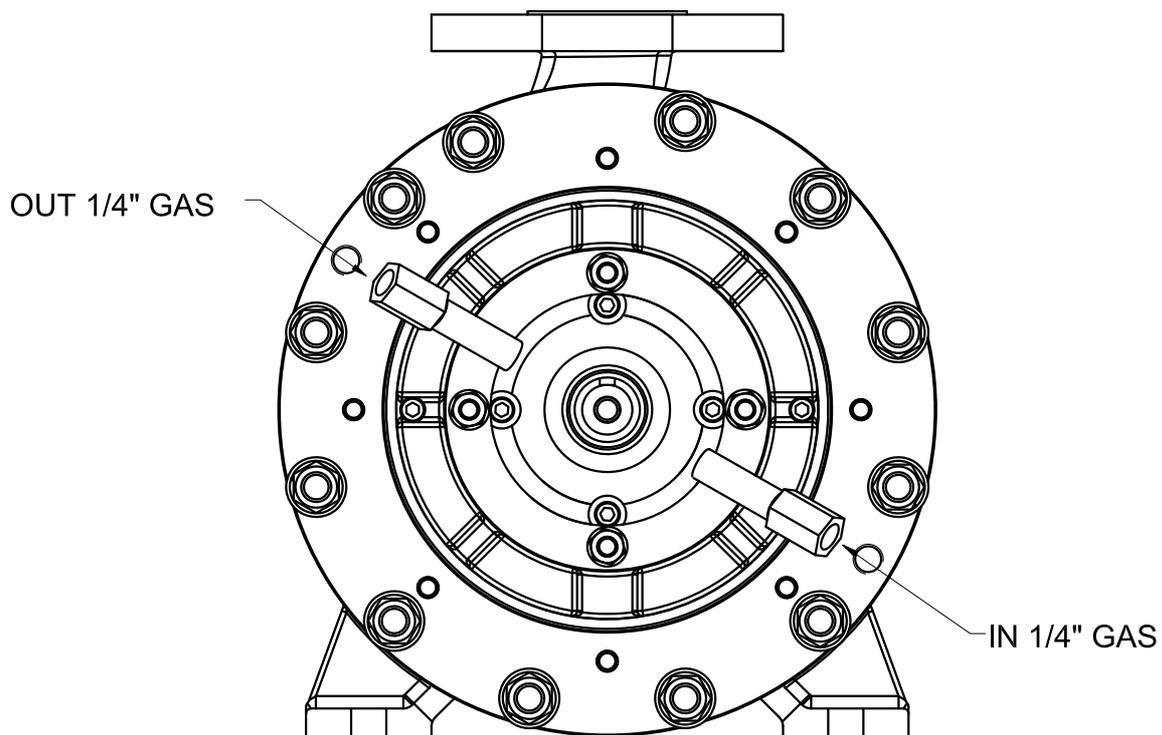


Fig. 1 Inlet and outlet are marked with the letters "I" and "O" respectively.

CSE-35QG - Single mechanical seal with air side lip seal and static grease quench

For seals with grease quenching system, the system must always be activated before running the pump and the pump must be filled and primed with the process liquid.

The lip seal (DIN) is installed in reverse compared to a normal installation, so that excessive grease can drain out.

The pump is equipped with this solution which is usually provided with grease already in the quenching system.

Grease must be replaced periodically according to the level of use of the pump.

If the mechanical seal breaks, the liquid will mix with the grease and therefore the lip seal, mechanical seal and grease will need to be replaced.

3.2 Running the pump

Even if tested by C.D.R. Pompe S.r.l. during the pump operational test, a small leak could still occur during start-up. After a short initial test run, necessary for the seal sliding faces to settle, the leak will gradually decrease.

IMPORTANT! Start the pump as described in the CCL series pump manual.

4. Operation and maintenance



The instructions in the pump manual and those in this manual are complementary.

The static part of the CSE-Q seal is secured to the stuffing box housing by means of 4 stud bolts, to which the fastening nuts are screwed: periodically check that the nuts are tightened by comparing them with the data under "Screw tightening torque table" in the CCL series pump manual.

Please always check the correct position of the rotating seal ring (472) on the shaft sleeve (523) before tightening the self-locking bolt (920.2) on the tie (917) of the pump shaft. This operation must be performed before fastening the volute casing.

Handle the seal rings with utmost care. The silicon carbide and graphite seal rings are extremely fragile. A light impact from a metal object or an accidental fall may be sufficient to chip them beyond repair.

Only for the CSE-QG version

An automatic grease regulator may be installed to ensure correct grease change for up to 12 months.

We recommend checking and verifying that the lip seal is in good conditions at least once a year.

4.1 Seal disassembly

Observe the following general provisions in addition to the instructions in the CCL manual and the regulations of the plant, as a non comprehensive example:

- Wear the relevant personal protective equipment.
- Check that the machine is grounded.
- Cut-off power supply to the pump motor.
- Check that the pump is not under pressure.
- Close the connecting valves of the system.

After disassembling the CCL pump as specified in the relevant manual, proceed in the following ways, depending on the model (CSE-Q or CSE-QG).

4.1.1 CSS-35Q seal disassembly

- 1) Secure the stuffing box housing (451) to the support frame (346), fastening it with safety screws (914.2).
- 2) After removing the impeller as described in the CCL pump manual, proceed to remove the key (940.1).
- 3) Hold the stuffing box housing (451) in position with one hand and undo the safety screws (914.2) at the same time.
- 4) Remove the stuffing box housing (451), mechanical seal (433), seal cover (720) and shaft sleeve (523) together.
- 5) Place the stuffing box housing (451) with the seal cover (720) facing upward.
- 6) Undo the seal cover (720) fastening screws and remove the cover.
- 7) Remove the rotating seal ring of the auxiliary seal (432) from the shaft and the static seal ring of the auxiliary seal (432) from the seal cover (720).
- 8) Slide out the sleeve (523) with relevant rotating seal ring (472), without damaging it.
- 9) Remove the flange seal (723) from the stuffing box housing (451), undoing the relevant locking nuts.

4.1.2 CSS-35QG seal disassembly

- 1) Secure the stuffing box housing (451) to the support frame (346), fastening it with safety screws (914.2).
- 2) After removing the impeller as described in the CCL pump manual, proceed to remove the key (940.1).
- 3) Slide out the sleeve (523) with the relevant rotating seal ring (472), taking care not to damage it.
- 4) Hold the stuffing box housing (451) in position with one hand and undo the safety screws (914.2) at the same time.
- 5) Remove the stuffing box housing (451), ensuring the static seal (face) ring (475) remains in its seat.
- 6) Undo the seal cover (720) fastening screws and remove the cover.
- 7) Remove the flange seal (723) from the stuffing box housing (451), undoing the relevant locking nuts.


4.2 Seal assembly

Please always see the provisions in the seal manufacturer's manual (if not manufactured by C.D.R. Pompe S.r.l.) and perform an accurate examination to ensure components are not corroded. Otherwise, replace the pump shaft or shaft sleeve.

4.2.1 Checks on pump

- Ensure that all surfaces that may come into contact with the seal are free from burrs and/or sharp edges.
- Check that all junction points are rounded.
- Ensure that edges are blunted.
- Check that the shaft sleeve is not damaged and/or scored.

4.2.2 Checks on pump shaft

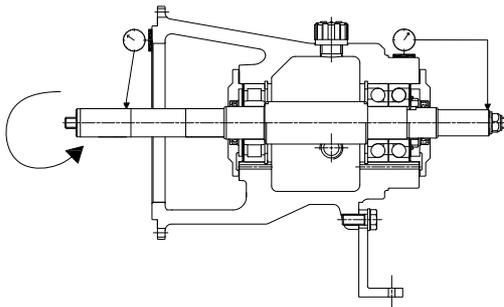

Radial oscillation of the shaft must not exceed 0.05 mm, both for ball bearings and roller bearings; if the shaft cannot be disassembled, inspection must be performed in the area where the mechanical seal seats. The value shown (0.05 mm) applies to 1000-3600 rpm rotation speeds.

Fig. 2 Shaft radial oscillation.

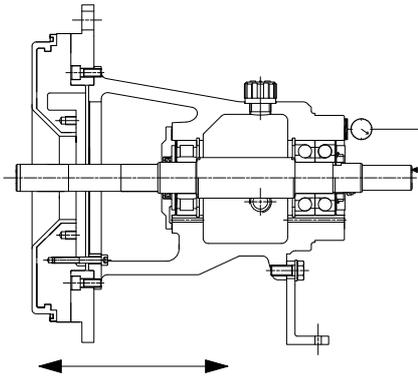


Fig. 3 Shaft axial clearance.

The shaft axial clearance after assembly inside the bearing bracket must not exceed 0.25 mm, regardless of the type of thrust bearing installed.

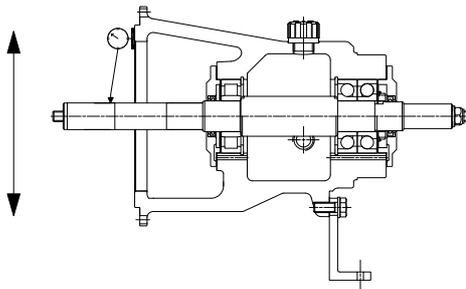


Fig. 4 Shaft radial clearance.

The shaft radial clearance after assembly inside the bearing bracket must not exceed 0.10 mm, regardless of the type of thrust bearing installed.

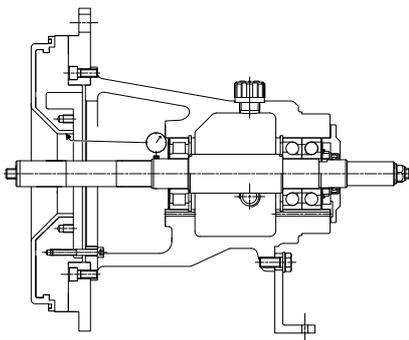


Fig. 5 Concentricity between shaft and stuffing box housing.

Concentricity between the shaft and the stuffing box housing must not exceed 1% of the shaft diameter.

4.2.3 Checks on seal

- Check the conditions of the seal rings and gaskets.
- Do not use worn or non compliant parts.
- Ensure that springs are still naturally elastic.

- To avoid any possible seizing, ensure the sliding faces are not polluted by grease, oil or dirt of any kind.

4.2.4 Precautions during installation

- 1) Before assembly always check the size and cross-section drawings of the pump, the seal assembly drawing and the parts list.
- 2) Ensure the seal is in good conditions when removing it from the box.
- 3) Seal assembly must be performed in dry conditions in a dust free environment.
- 4) Do not use oil or grease during assembly.
- 5) Before assembly, check that the seal faces are completely clean; otherwise, clean them with a solvent (e.g. alcohol) which does not leave residues on the faces. **DO NOT LUBRICATE IN ANY WAY!**
- 6) If installation is difficult, wet the seal seat or shaft with denatured alcohol (or water with detergent), taking care not to pollute the seal faces.
- 7) To set the seal onto the shaft sleeve, use an insertion cone or a pad made of a material that cannot damage the seal (e.g. PTFE). Only for CSE serie seals, the rotating seal ring with gaskets must be set by means of a pad made of a material that would not damage the ring.
- 8) To facilitate assembly, lubricant may be used for gaskets. The lubricant usually used is silicone, but check it is compatible with the process fluid before using it.

4.2.5 Seal installation

Follow the procedure in chapter "Seal disassembly" in reverse order.

Before assembly, ensure that the seal faces are completely clean, otherwise clean them with a solvent (e.g. alcohol) which does not leave residues on the faces. **DO NOT LUBRICATE IN ANY WAY!**

Improper tightening of screws/dowels may cause a dangerous situation, since the mechanical seal may move inside the seal chamber when under pressure.

5. Machine stop or storage

The storage environment must have a relative humidity lower than 70% and optimal temperature of approximately 25°C. In any case, the storage temperature range must not exceed the following limits: -20°C / +45°C

When storing the pump with the mechanical seal installed, the storing substance must not affect the function of the mechanical seal. Gaskets must not stick, harden or swell.

After storage for 2-3 years the mechanical seal must be checked to verify that its functional characteristics have not changed. This applies particularly to:

- sealing faces,
- auxiliary sealing elements,
- elasticity and lack of damage of the gaskets.

Inspection must be performed by C.D.R. Pompe S.r.l. or other party authorised by C.D.R. Pompe S.r.l.

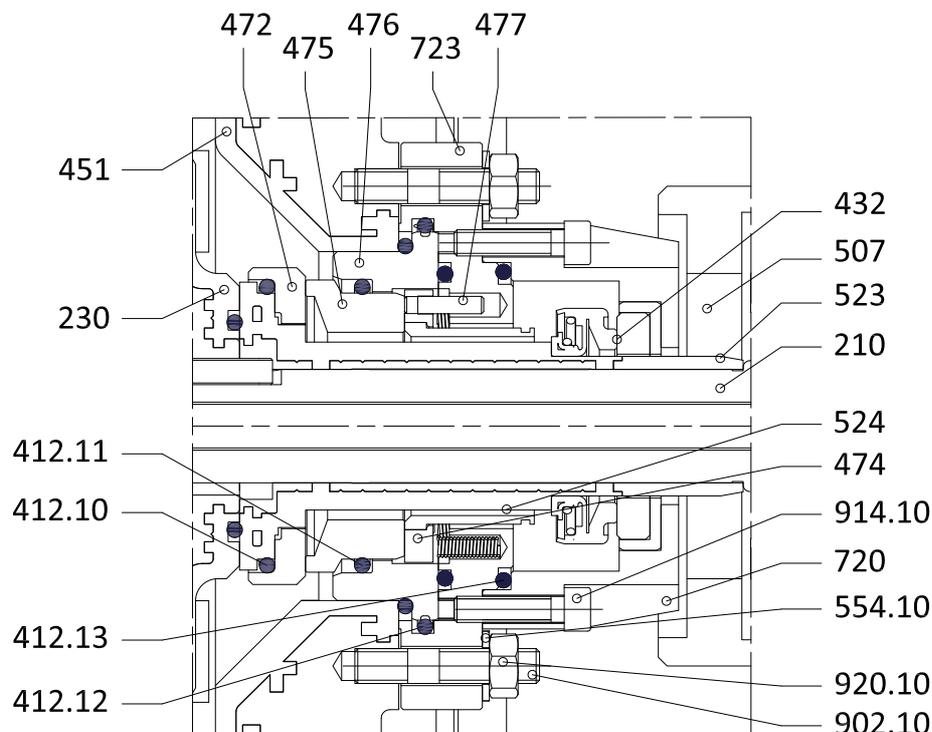


Fig. 6 CSE-Q

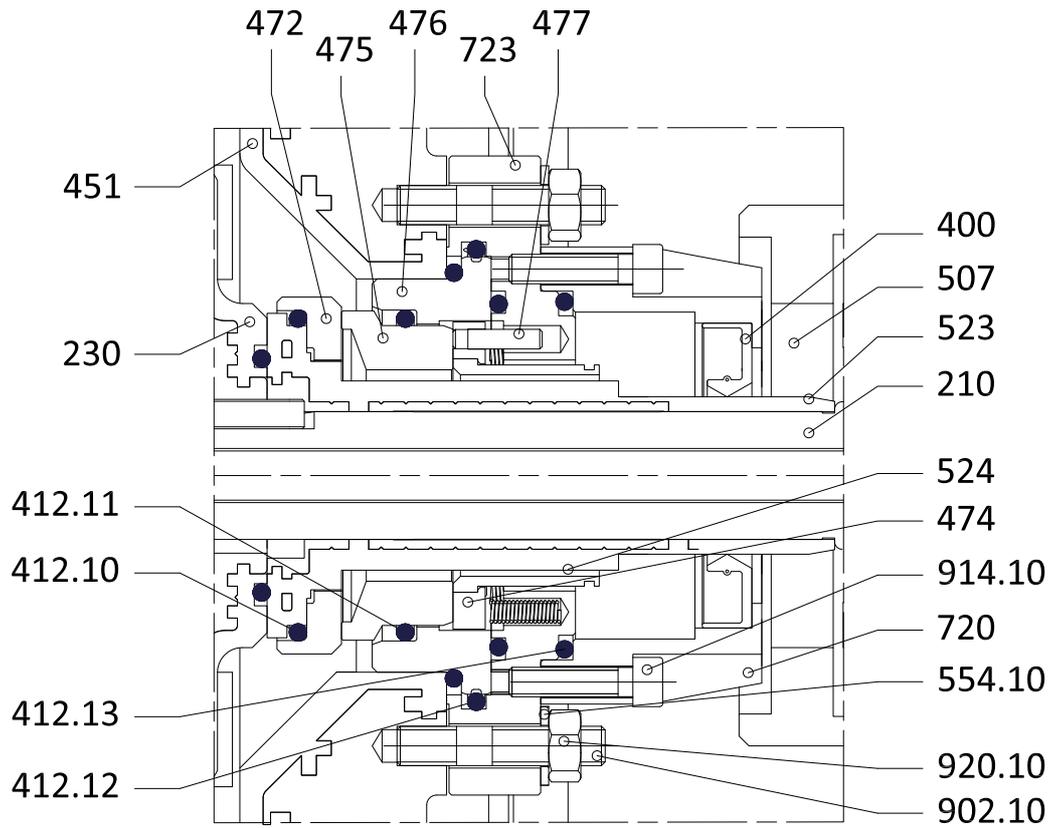


Fig. 7 CSE-QG

DIN Cod.	DESCRIPTION
210	Shaft
230	Impeller
451	Stuffing Box Housing
523	Shaft Sleeve
400	Gasket
412.10	O-Ring
412.11	O-Ring
412.12	O-Ring
412.13	O-Ring
432	Auxiliary Seal
472	Rotating Seal (Face) ring
474	Thrust Ring
475	Static Seal (Face) ring
476	Stationary Seal Ring Body
477	Spring
507	Splash Guard
524	Protection Sleeve
554.10	Washer
720	Fitting Flange
723	Flange
902.10	Stud
914.10	Socket Head cap screw
920.10	Nut



CDR Pumps (UK) Ltd

3 Morris Close, Park Farm Industrial Estate,
Wellingborough, Northants, NN8 6XF

 01933 674777

 sales@cdrpumps.co.uk

 www.cdrpumps.co.uk

C.D.R. Pompe S.r.l.

Via P. Togliatti, 26/A, Senago
20030 - Milano

www.cdrpompe.it